



OUTBACK MOTORTEK


Installation Instructions >> Skid Plate >> BMW F650/700/800GS/800GSA

Thank you for trusting Outback Motortek with your purchase of our product. Hope you will find pride in installing and showing off the item you are just about to open. Outback Motortek products are designed and tested in Ontario, Canada and engineered and manufactured in the European Union, Hungary.

“Till the wheels fall off”
Lorry Gombos

Founder and owner
Outback Motortek

See attached pages for product kit, recommended tools and recommended torque specs.

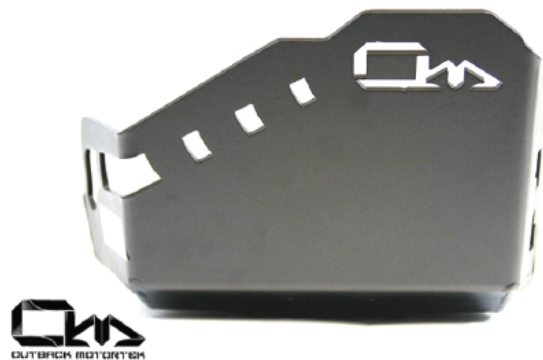


1.

OUTBACK MOTORTEK

1. **Proceed only if applicable:** Remove OEM aluminum or plastic skid plate using a 13mm socket and ratchet.

2. Continue by removing the front mount through-bolt using a 13mm socket, ratchet and ratchet extension. OEM skid plate should be loose now to easily remove from the engine mounts.

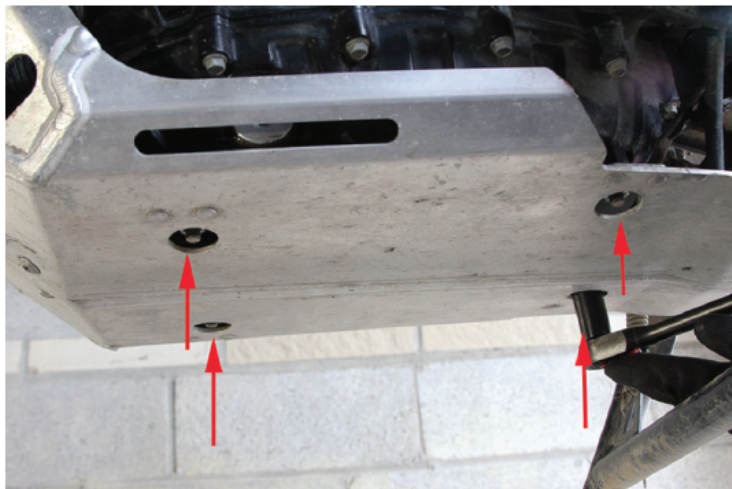

2.

Installation Instructions >> Skid Plate >> BMW F650/700/800GS/800GSA

3. Take the Ouback Motortek F800GS/GSA skid plate and place the U shaped front mount inside the skid plate (8mm nut placed rider's right side) and insert the two M6x15 bolts. Don't tighten it, yet.




4. Place the bottom metal mounting brackets on the vibration isolation mounts. Short mounting bracket attaches on the back side and the long one in the middle. Using your hand place the M8 nyloc nuts on and turn it by hand a few times then tighten each using a 13mm socket/ratchet combo.



3.

OUTBACK MOTORTEK

5. Insert the M8x110mm through bolt in the front mount. You may need to move the bracket slightly to align the holes properly. Use the ratchet extension with 6mm hex bit. Make sure the bolt is threading and start tightening it but not completely, yet.

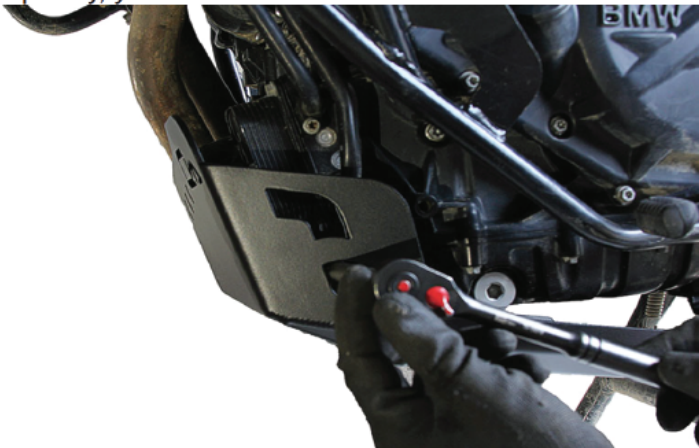

6. Take the four M8x20mm Allen bolts and hand-thread them. Using an M5 Allen key tighten all four bolts.



7. Make sure all the bolts are now tightened to the required torque spec by using a torque wrench!

4.

Congratulations! You've completed installing your Outback Motortek product.



Should you have any question regarding the installation, please contact us at info@outbackmotortek.com.

Or call toll free at 1 877 931 3636

Important note! Outback Motortek recommends its customer to install their products by a certified, experienced motorcycle mechanic. Outback Motortek assumes no liability for any accident, injury, death, loss, or other claim related to or resulting from the use of its products. In no event shall Outback Motortek be liable for incidental or consequential damages relating to or resulting from the use of its product or any of its parts.

5.

PRODUCT KIT AND RECOMMENDED TOOLS

- 1) TORQUE WRENCH
 - 2) 3/8" RATCHET
 - 3) RATCHET EXTENSION
 - 4) 13MM SOCKET
 - 5) M6 HEX BIT SOCKET
 - 6) 5MM ALLEN KEY
 - 7) 4MM ALLEN KEY
 - 8) THREADLOCKER
-
- 9) 3X SKID PLATE MOUNTS
 - 10) 1X M8X110MM ALLEN BOLT
 - 11) 4X M8X20 ALLEN BOLTS
 - 12) 2X M6X16MM ALLEN BOLTS
 - 13) 4X M8 NYLOC NUTS + WASHERS

